


# Kit 262 Series Installation Instructions for 4x4 Wood Posts

## Hole size for 1/8" dia. cable installation:

Drill 5/32" hole clear through intermediate posts and pilot hole through end posts.

Drill 29/64" hole clear through Receiver end post.

Drill 29/64" hole 1-3/4" deep from the outside of the Pull-Lock non-tensioning end post.

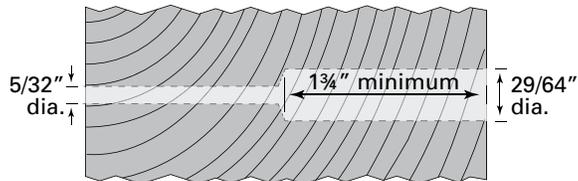


## Hole size for 3/16" dia. cable installation:


Drill 7/32" hole clear through intermediate posts and pilot hole through end posts.

Drill 29/64" hole clear through Receiver end post.


Drill 29/64" hole 1-3/4" deep from the outside of the Pull-Lock non-tensioning end post.

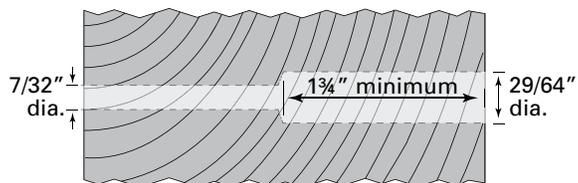

1. Install the tensioning end first with the 3-1/2" long Receiver.
2. Slip the 7/16SAE S/S flat washer over the body of the Receiver and insert the Receiver into the post.
3. Start the threaded stud attached to the cable into the Receiver and turn 3 complete turns. This will thread about 1/2 of the stud into the Receiver.

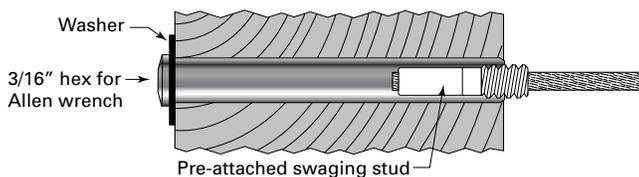

4. Run the bare end of the cable through all your intermediate posts and through the end post where you will be installing the Pull-Lock fitting.

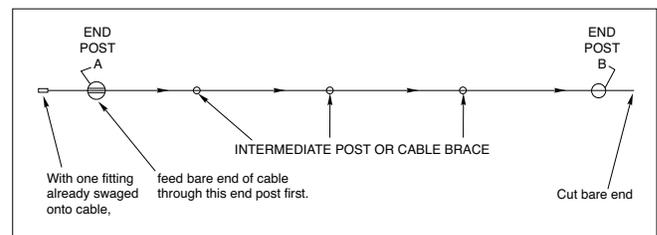

5. Slip the 7/16SAE S/S flat washer over the body of the Pull-Lock fitting.

