


17100 Modular Stair Bracket Assembly 1-1/4" IPS

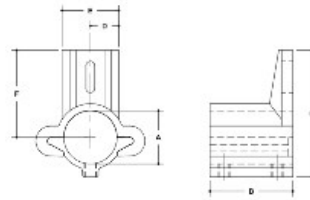

NOTE: BRACKET MUST BE INSTALLED WITH 1/2" GAP BETWEEN BRACKET AND PIPE TO ALLOW FOR THERMAL EXPANSION.



#18S Modular Stair Bracket Assembly

SCALE: 1/2"=1'

PIPE SIZE	ENGLISH UNITS (INCH)								METRIC UNITS (MM)																		
	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	
2"	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
2 1/2"	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10
3"	14	14	14	14	14	14	14	14	14	14	14	14	14	14	14	14	14	14	14	14	14	14	14	14	14	14	14
3 1/2"	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
4"	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

[Click here for chart](#)

