


CA-JAB6 Adjust-A-Body with Concrete Anchor Bolt Tensioner. For 1/8" Cable use F-4 Ferrule. For 3/16" Cable use F-6 Ferrule.



ADJUST-A-BODY® WITH CONCRETE ANCHOR BOLT TENSIONER

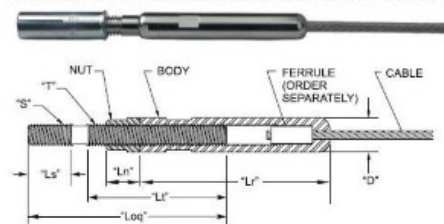

Easy to install

The mounting end on each of our Adjust-A-Body® tensioners has a male thread that mates with the female thread within the body of the tensioner. The swaging ferrule is swaged onto the cable and holds the cable inside the body. The body rotates on the cable and provides a considerable amount of take-up during tensioning with an open-end wrench. After tensioning, the lock nut locks the assembly in place.

Here is an easy, practical way to attach your tensioner to a concrete wall. The end screws into a commonly available concrete anchor (not included). Order the concrete anchor separately from your local building supply outlet.